

# Samples of Assembled Tubes




Pressfit luer into tube ID  
(no adhesive used)



Luer and tube glued together with  
UV Adhesive, applied with  
applicator bushing



Luer and tube are solvent  
bonded together

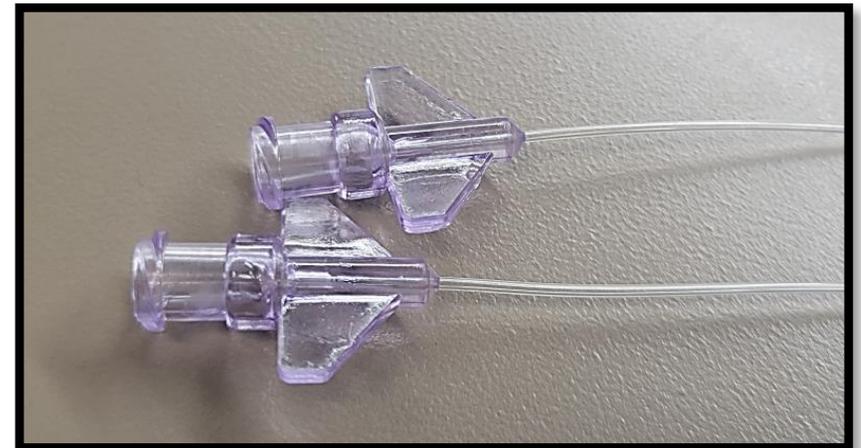

Luer and tube glued together with UV  
Adhesive, applied with syringe